



Universal Tool

UT1555EI-TH

1-1/2" Grip Handle Inside Trigger
Impact Wrench

IMPACTS

General Safety Information & Replacement Parts



Lorem ipsum

TABLE OF CONTENTS

General Safety Information	2
Air Compressor and Air Tool Safety	2-3
Tool Specifications	3
Air Supply/Maintenance/Lubrication	4
Troubleshooting	5
Warranty	5
Service Parts/Exploded View	6-7



WARNING: This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. **Wash hands after handling.**



WARNING: Risk of injury to persons. Read and understand operation instructions. Always become familiar with all the instructions and warnings before operating any pneumatic tool.

CONTINENTALTOOLGROUP.COM

Please contact 1-800-356-3392 for further assistance.

Safety Information



7.2.2.3 GENERAL SAFETY RULES

- Multiple hazards. Read and understand the safety instructions before installing, operating, repairing, maintaining, changing accessories on, or working near the power tool. Failure to do so can result in serious bodily injury.
- Only qualified and trained operators should install, adjust or use the power tool.
- Do not modify this power tool. Modifications may reduce the effectiveness of safety measures and increase the risks to the operator.
- Do not discard the safety instructions – give them to the operator.
- Do not use a tool if the tool has been damaged.
- Warnings shall be given against the risk of explosion or fire due to the material being processed;
- Warnings shall be given against the risk of cutting.



7.2.2.4 PROJECTILE HAZARDS

- Failure of the work piece, of accessories, or even of the tool itself may generate high velocity projectiles.
- Always wear impact-resistant eye protection during operation of the tool. The grade of protection required should be assessed for each use.



7.2.2.5 ENTANGLEMENT HAZARDS

- Entanglement hazard - choking, scalping and/or lacerations can occur if neck ware, hair or gloves are not kept away from tool and accessories.

7.2.2.6 OPERATING HAZARDS

- Use of the tool may expose the operator's hands to hazards including crushing, impacts, cuts and abrasions and heat. Wear suitable gloves to protect hands.
- Operators and maintenance personnel must be physically able to handle the bulk, weight and power of the tool.
- Hold the tool correctly: be ready to counteract normal or sudden movements – have both hands available.
- Maintain a balanced body position and secure footing.
- Keep hands away from rotating or reciprocation accessories, spindles or other moving parts.
- Release the start and stop device in the case of an interruption of the energy supply
- Use only lubricants recommended by the manufacturer.



7.2.2.7 REPETITIVE MOTIONS HAZARDS

- When using a power tool, you may experience discomfort in your hands, arms, shoulders, neck, or other parts of your body.
- While using a power tool, position your body in a comfortable posture. Maintain secure footing and avoid awkward or off-balanced postures. Changing your posture during extended tasks may help avoid discomfort and fatigue.
- If you experience symptoms such as persistent or recurring discomfort, pain, throbbing, aching, tingling, numbness, burning sensation, or stiffness, do not ignore these warning signs. Promptly tell your employer and consult a qualified health professional.

7.2.2.8 ACCESSORY HAZARDS

- Only use sizes and types of accessories and consumables that are recommended by the power tool manufacturer.



7.2.2.9 WORKPLACE HAZARDS

- Slips, trips and falls are major causes of workplace injury. Be aware of slippery surfaces caused by use of the tool and also of trip hazards caused by the air line or hydraulic hose.
- Proceed with care in unfamiliar surroundings. Hidden hazards may exist, such as electricity or other utility lines.
- This power tool is not intended for use in potentially explosive atmospheres and is not insulated from coming into contact with electric power.
- Make sure there are no electrical cables, gas pipes etc. that could cause a hazard if damaged by use of the tool.



7.2.2.10 DUST AND FUME HAZARDS

- Dust from some work processes can cause cancer, birth defects or other respiratory diseases. Risk assessment of these hazards and implementation of appropriate controls is essential.

- If the pneumatic tool is used in a dust filled environment exhaust air can cause a dust hazard
- Dusts and fumes generated when using power tools can cause ill health (for example: cancer, birth defects, asthma and/or dermatitis); risk assessment of these hazards and implementation of appropriate controls of is essential.
- Risk assessment should include dust created by the use of the tool and the potential for disturbing existing dust.
- Operate and maintain the power tool as recommended in these instructions, to minimize dust or fume emissions
- Direct the exhaust so as to minimized disturbance of dust in a dust filled environment
- Where dusts or fumes are created, the priority shall be to control them at the point of emission.
- All integral features or accessories for the collection, extraction or suppression of airborne dust or fumes should be correctly used and maintained in accordance with the manufacturer's instructions.
- Select, maintain and replace the consumable/inserted tool as recommended in these instructions, to prevent an unnecessary increase in dust or fumes
- Use respiratory protection as instructed by your employer or as required by occupational health and safety regulations;



7.2.2.11 NOISE HAZARDS

- Unprotected exposure to high noise levels can cause permanent, disabling, hearing loss and other problems such as tinnitus (ringing, buzzing, whistling or humming in the ears);
- Risk assessment of these hazards and implementation of appropriate controls of is essential.
- Appropriate controls to reduce the risk may include actions such as damping materials to prevent work pieces from 'ringing'
- Use hearing protection as instructed by your employer or as required by occupational health and safety regulations;
- Operate and maintain the power tool as recommended in these instructions, to prevent an unnecessary increase in noise levels;
- Select, maintain and replace the consumable/inserted tool as recommended in these instructions, to prevent an unnecessary increase in noise.



7.2.2.12 VIBRATION HAZARDS

- Exposure to vibration can cause disabling damage to the nerves and blood supply of the hands and arms;
- Wear warm clothing when working in cold conditions and keep your hands warm and dry;
- If you experience numbness, tingling, pain or whitening of the skin in your fingers or hands, stop using the power tool, and tell your employer. You should also seek medical advice from a qualified occupational health professional.
- Operate and maintain the power tool as recommended in these instructions, to prevent an unnecessary increase in vibration;
- Select, maintain and replace the consumable/inserted tool as recommended in these instructions, to prevent an unnecessary increase in vibration levels;
- Support the weight of the tool in a stand, tensioner or balancer, because the operator can then use a lighter grip to support the tool.
- Hold the tool with a light but safe grip taking account of the required hand reaction forces, because the risk from vibration is generally greater when the grip force is higher.

7.2.3 ADDITIONAL SAFETY INSTRUCTIONS FOR PNEUMATIC POWER TOOLS - AIR SUPPLY & CONNECTION HAZARDS

- Air under pressure can cause severe injury.
- Always shut off air supply, drain hose of air pressure and disconnect tool from air supply when not in use, before changing accessories or when making repairs.
- Never direct air at yourself or anyone else.
- Whipping hoses can cause severe injury. Always check for damaged or loose hoses and fittings.
- Whenever universal twist couplings (claw couplings) are used, lock pins must be installed.
- Do not exceed the maximum air pressure stated on the tool.
- Use whip check safety cables to safeguard against possible hose to tool and hose to hose connection failure.
- Never carry an air tool by the hose.

Safety Information (continued)

AIR COMPRESSOR AND AIR TOOL SAFETY

1. Risk of Bursting. Do not adjust the regulator to result in output pressure greater than the marked maximum pressure of this air tool.
2. Ensure the hose is free of obstructions or snags. Entangled or snarled hoses can cause loss of balance or footing and may become damaged.
3. Never leave a tool unattended with the air hose attached.
4. Do not operate this tool if it does not contain a legible warning label.
5. Do not continue to use a tool or hose that leaks air or does not function properly.
6. Never direct a jet of compressed air toward people or animals.
7. Protect your lungs. Wear a face or dust mask if the operation is dusty.



WARNING: Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

Lead from lead based paint, crystalline silica from bricks and cement and other masonry products, arsenic and chromium from chemically-treated lumber.

Your risk from those exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well-ventilated area, and work with approved safety equipment, such as dust masks that are specifically designed to filter out microscopic particles.

Important Warnings - Impacts



1. Eye protection and hearing protection and safety gloves must always be worn when operating an impact wrench or impact driver.
2. When using heavy impact sockets or sockets on impact wrenches with 3/4" drive anvils or larger, a socket retaining ring and pin should be used to prevent the socket falling off and causing injury.
3. Use only impact sockets and accessories. Only use sockets designated "FOR USE WITH IMPACT WRENCHES", hand tool sockets can break, creating a hazard from flying pieces. Always check sockets, retainers and drives regularly for wear or damage and replace when necessary.

Accessory Hazards

4. Disconnect the assembly power tool for threaded fasteners from the energy supply before changing the inserted tool or accessory.
5. Do not touch sockets or accessories during impacting as this increases the risk of cuts, burns or vibration injuries.
6. Use only sizes and types of accessories and consumables that are recommended by the assembly power tool for threaded fasteners manufacturer; do not use other types or sizes of accessories and consumables.

Specifications

Model	Working Torque (ft-lb) / Nm	Max Torque (ft-lb) / Nm	Square Drive (in.)	Handle	Socket Retainer	Weight (lb.)	Weight (kg)	Length (in.)	Length (mm)	Air Inlet (NPT/BSP)	Hose (I.D. in./mm)	Air Cons (cfm)
UT1555EI-TH	3,200 ft-lbs 4,339 Nm	4,200 ft-lbs 5,694 Nm	1-1/2"	End Grip I-T	Through Hole	35.50	16.10	16.20	411.4	1/2" (12.70 mm)	3/4" (19.05 mm)	90

Operating Details (Air Supply, Hose/Hose Connections, Lubrication, Maintenance)

FORESEEN USE OF TOOL

Impact wrenches should only be used to install and remove threaded fasteners

AIR SUPPLY

The efficiency of the tool is dependent on the proper supply of clean dry air at 90 psig (6.2 bar). The use of a line filter, pressure regulator, and lubricator will insure maximum output and life of tools. Before connecting tool, blow out the airline to remove water and dirt which may have accumulated.

HOSE AND HOSE CONNECTIONS

Supply hose should not be less than 1/2" (13mm) I.D. Extension hoses should be at least 3/4" (19mm) I.D. Use couplings and fittings with at least 1/2" (13mm) I.D. When using quick couplers, install a 6 ft (2m) leader hose between tool and quick couplers.

LUBRICATION

Use ATP BLUE MAGIC oil. An airline lubricator, set to deliver 1 to 2 drops per minute, is recommended. If a lubricator is not used, add .06 oz. (1.8cc, 18 to 22 drops) of oil into the air inlet once daily.

GENERAL OPERATION

MAINTENANCE

Disassemble, clean, and inspect the impact mechanism every two months.

REVERSING SPINDLE ROTATION

The direction of the spindle rotation is controlled with the reversing lever located in the front of the motor housing, above the trigger. Refer to illustration for spindle rotation vs. reverse lever position.

SOCKET

Use only impact sockets in good shape.

Use deep impact socket impact rather than extension bars.

IF THE TOOL LOSES POWER, CHECK THE FOLLOWING:

Air pressure

Ensure that there is an adequate supply of clean, dry air at 90 psig (6.2 bar).

Sockets


Check for loose, worn, or cracked sockets.

Hose Size

Ensure that the hoses, couplers and fittings meet the criteria specified in "HOSE AND HOSE CONNECTIONS" above.

Dirt or Debris in Tool or Muffler

Clean tool or muffler as needed.

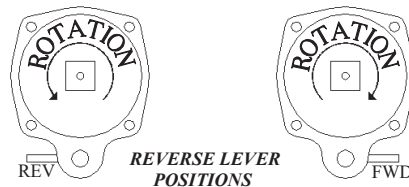

Troubleshooting

Problem	Possible Cause	Solution
The tool runs slowly or will not operate.	There is grit or gum in the tool.	Flush the tool with air tool oil or gum solvent.
	The tool is out of oil.	Lubricate the tool according to the lubrication instructions in this manual.
	The air pressure is low.	☐ Adjust the regulator on the tool to the maximum setting. ☐ Adjust the compressor regulator to the tool's maximum setting of 90 psi.
	The air hose leaks.	Tighten and seal the hose fittings with pipe thread tape if leaks are found.
	The air pressure drops.	☐ Ensure the hose is the proper size. Long hoses or tools using large volumes of air may require a hose with an I.D. of ½" or larger depending on the total length of the hose. ☐ Do not use a multiple number of hoses connected together with a quick connect fitting. This causes additional pressure drops and reduces the tool power. Directly connect the hoses together.
	There is a worn rotor blade in the motor.	Replace the rotor blade.
	There is a worn ball bearing in the motor.	Remove and inspect the bearing for rust, dirt, and grit. Replace or clean and grease the bearing with bearing grease.
There is moisture blowing out of the tool's exhaust.	There is water in the tank.	Drain the tank. (See the air compressor manual for instructions.) Lubricate the tool and run it until water is not evident. Lubricate the tool again and run for 1-2 seconds.
The tool impacts slowly or not at all.	The tool needs lubricating.	Lubricate the air motor and the impact mechanism according to the lubrication instructions in this manual.
	The tool regulator setting is in the wrong position.	Adjust the regulator on the tool to the maximum setting.
The tool impacts rapidly, but will not remove bolts.	The tool has a worn impact mechanism.	Replace the worn impact mechanism components.
The tool does not impact.	The impact mechanism is broken.	Replace the broken impact mechanism components.


Warranty

Limited Warranty: Universal Tool warrants its tools to be free from defects in material and workmanship for one year from the date of purchase. This warranty does not apply to tools which have been abused, misused, modified or repaired by someone other than Universal Tool or its authorized service centers. If a UT tool proves defective in material or workmanship within one year after purchase, return it to any authorized service center or Universal Tool freight prepaid. Please enclose your name, address and adequate proof of date of purchase and a short description of the defect. Universal Tool will, at its option, repair or replace defective tools free of charge. Repairs or replacements are warranted as described above for the remainder of the original warranty period. Universal Tool's sole liability and your exclusive remedy under this warranty is limited to repair or replacement of the defective tool.

There are no other warranties expressed or implied and Universal Tool shall not be liable for incidental, consequential or special damages, or any other damages, costs or expenses excepting only the cost or expense of repair or replacement as described above.

Service Parts / Exploded View Drawing

CONFIGURATIONS		
MODEL #	ANVIL	HANDLE
ATP1555EI-TH	6A	13.16A

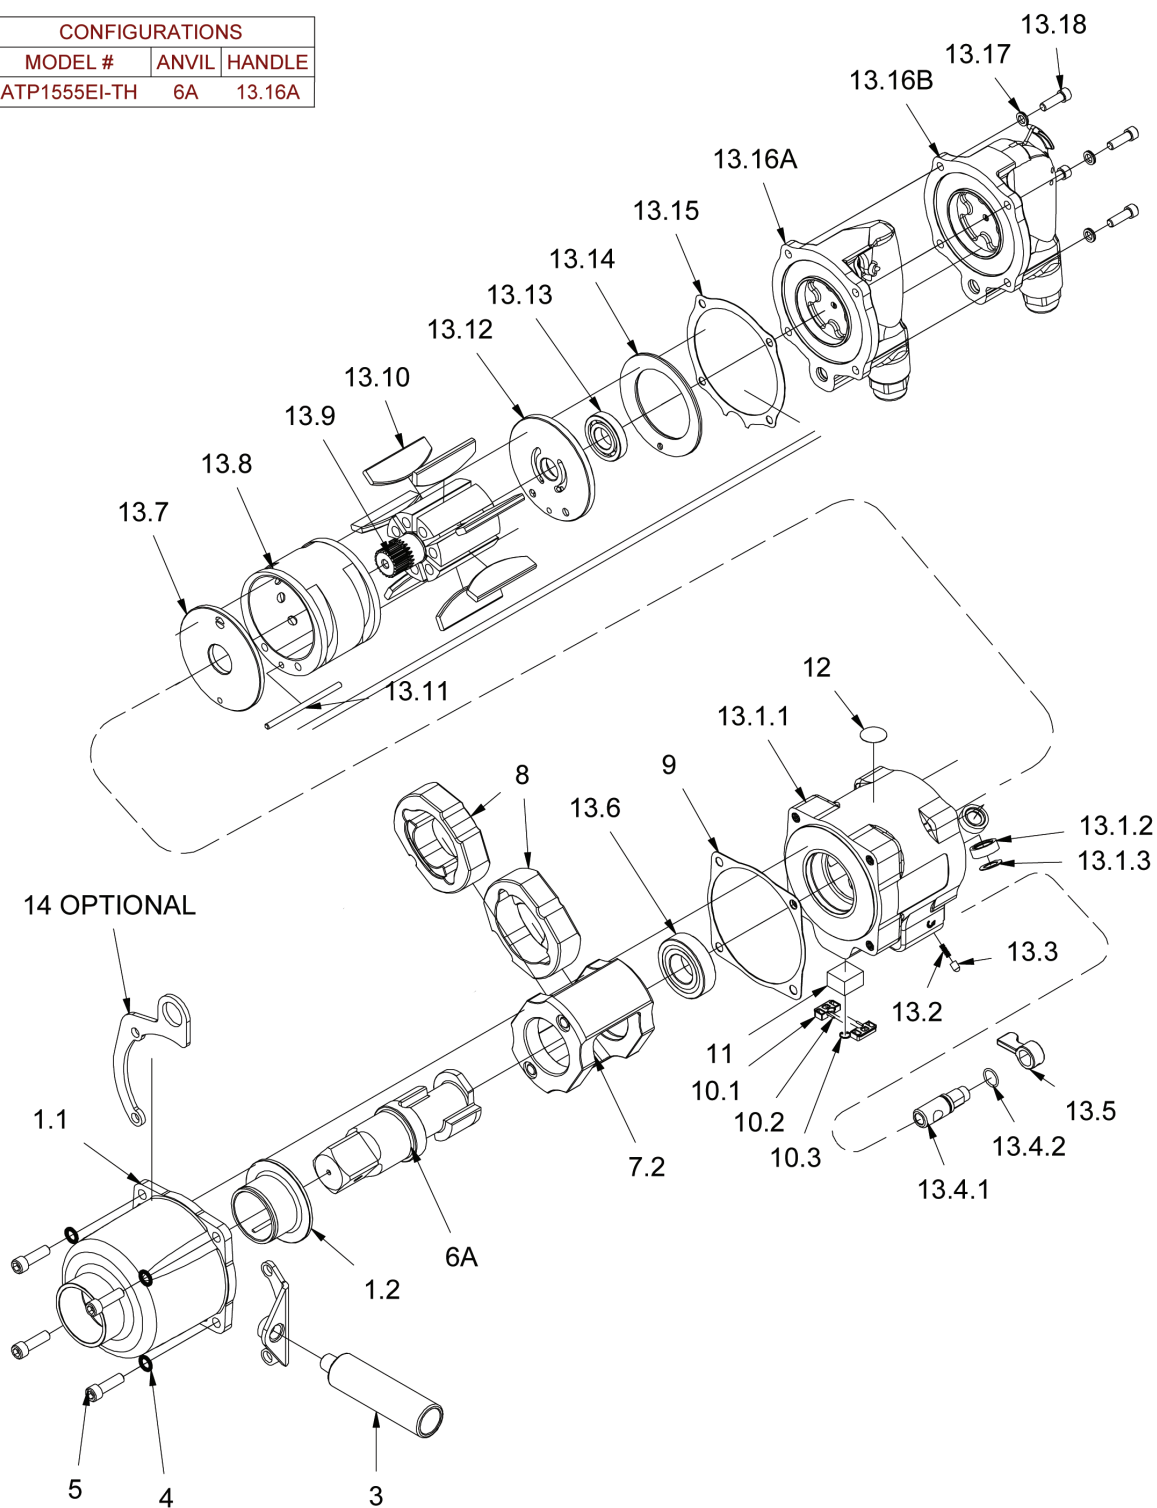

Service Parts / Exploded View Drawing

ITEM #	PART #	DESCRIPTION	QTY
1	1555-A727	HAMMER CASE ASSEMBLY	1
1.1	1555-727M	HAMMER CASE, BARE	1
1.2	2950-541	HAMMER CASE BUSHING	1
2	1555-364	DEAD HANDLE BRACKET	1
3	834-48	ASSIST HANDLE	1
4	NL10	3/8 WEDGE LOCK WASHER	4
5	88664	BOLT, 3/8-16 X 1.25 9/16 HEX	4
6A	2950-726	1-1/2" SQUARE DRIVE ANVIL	1
7	2950-A703	HAMMER FRAME ASSEMBLY	1
7.1	2950-704	HAMMER PIN	2
7.2	4581	HAMMER FRAME, BARE	1
8	2950-724	HAMMER	2
9	1555-36	HAMMER CASE GASKET	1
10	1555-A124F	EXHAUST SCREEN	1
10.1	1555-124F	EXHAUST SCREEN	2
10.2	28-0062-0500	1/16 x 1/2 DOWEL PIN	2
10.3	HO-037	RETAINING RING, INTERNAL, 3/8"	1
11	1045-311	SILENCER	1
12	12909	READ MANUAL LABEL	1
13	-	INSIDE/OUTSIDE TRIGGER, MOTOR ASSY	1
13.1	1555-A40	MOTOR HOUSING ASSY	1
13.1.1	1555-40M	MOTOR HOUSING	1
13.1.1.3	2934-330S	REVERSE VALVE BUSHING	1

ITEM #	PART #	DESCRIPTION	QTY
13.1.2	R44H-210A	AIR PORT GASKET	2
13.1.3	2940-200	GASKET RETAINER	2
13.2	4U-664	REVERSE LOCK SPRING	1
13.3	4U-663B	REVERSE LOCK PLUNGER	1
13.4	2934-A329	REVERSE VALVE	1
13.4.1	3970	VALVE	1
13.4.2	85H-167	O-RING 016	1
13.5	2934-658A	REVERSING LEVER	1
13.6	TA-22	FRONT ROTOR BEARING	1
13.7	2950-11	FRONT END PLATE	1
13.8	2950-3	CYLINDER ASSEMBLY	1
13.9	3955-53	ROTOR	1
13.10	1555-42	VANE	7
13.11	2950-98	CYLINDER DOWEL PIN	1
13.12	2950-12	REAR END PLATE	1
13.13	C-075812	REAR ROTOR BEARING	1
13.14	MR-207	MOTOR CLAMP WASHER	2
13.15	1555-283	HAND GASKET	1
13.16A	1555-A92	INSIDE TRIGGER HANDLE ASSEMBLY	1
13.17	18889	5/16 NORD LOCK WASHER	4
13.18	700-48	5/16 - 18 X 1 SOCKET HEAD CAP SCREW	4
14	1555-2	HANGER (OPTIONAL)	1



Universal Tool

Questions, problems, missing parts?

US

Call Customer Service
8 a.m.-5 p.m., EST, Monday-Friday

800-356-3392

**Universal Tool a Brand of
Continental Tool Group**
1660 Silver Beach Road, Suite 100,
Lake Park, FL 33403

info@continentaltoolgroup.com
ContinentalToolGroup.com

UK

Call Customer Service
0900-1700 Monday-Friday

+44 (1) 494 88 3300

Universal Air Tools Company Ltd.
Unit 12-13 Millfield Business Park,
Banbury Lane, Pattishall, Towcester,
Northamptonshire,
NN12 8FB, UK

europe@continentaltoolgroup.com
ContinentalToolGroup.com

Retain this manual for future use.

